

# Switch Mode Power Supply

# S8JX (50/100/150-W Models)

## Low-profile Power Supply to Help Reduce Panel Depth



- Easy Mounting:
  - Mounting Bracket provided as a standard feature.
  - Mounts to DIN Rail.
  - Screw-mount at the top.
- Safety standards:
  - UL 508/60950-1
  - cUL CSA C22.2 No. 107.1
  - cUR CSA C22.2 No. 60950-1
  - EN 50178 (= VDE 0160)
  - EN 60950-1 (= VDE 0805 Teil 1)
- EMC: Conforms to EN 61204-3 Class A.
- Two-year warranty.



 Refer to *Safety Precautions* on page 11.

## Model Number Structure

### Model Number Legend

**Note:** Not all model number combinations are available. Refer to *List of Models* in *Ordering Information*, on next page.

S8JX-G□□□□□□□□  
                  1   2   3   4

#### 1. Power Ratings

05: 50 W  
100: 100 W  
150: 150 W

#### 2. Output Voltage

05: 5 V  
12: 12 V  
24: 24 V

#### 3. Configuration

None: Open-frame  
C: Covered

#### 4. Configuration/mounting

None: Front-mounting  
D: DIN Rail-mounting

## Ordering Information

### List of Models

**Note:** For details on normal stock models, contact your nearest OMRON representative.

Configuration		Input voltage	Power ratings	Output voltage	Output current	Model				
Open-frame Power Supplies	Front-mounting	100 to 240 VAC (free)	50 W	5 V	10 A	S8JX-G05005				
				12 V	4.2 A	S8JX-G05012				
				24 V	2.1 A	S8JX-G05024				
			100 W	5 V	20 A	S8JX-G10005				
				12 V	8.5 A	S8JX-G10012				
				24 V	4.5 A	S8JX-G10024				
			150 W	24 V	6.5 A	S8JX-G15024				
			Covered Power Supplies	Front-mounting	100 to 240 VAC (free)	50 W	5 V	10 A	S8JX-G05005C	
							12 V	4.2 A	S8JX-G05012C	
24 V	2.1 A						S8JX-G05024C			
100 W	5 V					20 A	S8JX-G10005C			
	12 V					8.5 A	S8JX-G10012C			
	24 V					4.5 A	S8JX-G10024C			
150 W	24 V					6.5 A	S8JX-G15024C			
Open-frame Power Supplies	DIN Rail-mounting					100 to 240 VAC (free)	50 W	5 V	10 A	S8JX-G05005D
								12 V	4.2 A	S8JX-G05012D
			24 V	2.1 A				S8JX-G05024D		
			100 W	5 V			20 A	S8JX-G10005D		
		12 V		8.5 A			S8JX-G10012D			
		24 V		4.5 A			S8JX-G10024D			
		150 W	24 V	6.5 A			S8JX-G15024D			
		Covered Power Supplies	DIN Rail-mounting	100 to 240 VAC (free)			50 W	5 V	10 A	S8JX-G05005CD
								12 V	4.2 A	S8JX-G05012CD
24 V	2.1 A							S8JX-G05024CD		
100 W	5 V						20 A	S8JX-G10005CD		
	12 V				8.5 A		S8JX-G10012CD			
	24 V				4.5 A		S8JX-G10024CD			
150 W	24 V				6.5 A		S8JX-G15024CD			

## Ratings, Characteristics, and Functions

Item		Input specification		100 to 240 V input		
		Power ratings *1		50 W	100 W	150 W
Efficiency (typical)				76% min.		86% min.
Input	Voltage *2			100 to 240 VAC (85 to 264 VAC)		
				100 to 370 VDC <b>Note:</b> This range is not applicable for the safety standards.		
	Frequency *2				50/60 Hz (47 to 450 Hz)	
	Current *3	100 V input		1.4 A	2.5 A	3.5 A
		200 V input		0.8 A	1.5 A	2.1 A
	Power factor				---	
	Harmonic current emissions				---	
	Leakage current *3	100 V input		0.5 mA max.		
		200 V input		1 mA max.		
Inrush current (for a cold start at 25°C) *3	100 V input		20 A max.			
	200 V input		40 A max.			
Noise filter				Yes		
Output *4	Voltage adjustment range *5		-10% to 15% (with V. ADJ)			
	Ripple *3		2% (p-p) max.			
	Input variation influence		0.4% max.			
	Load variation influence		0.8% max. (0 to 100% load, rated input voltage)			
	Temperature variation influence		0.05%/°C max. (at rated input and output)			
	Startup time		500 ms max. (up to 90% of output voltage at rated input and output)			
	Hold time *3		20 ms min.			
Additional functions	Overload protection *6		105% to 160% of rated load current, voltage drop, intermittent, automatic reset			
	Overvoltage protection *7		Yes			
	Overheat protection		No			
	Parallel operation		No			
	Series operation		Yes (For up to two Power Supplies; external diodes required.)			
Protective circuit operation indicator		No				
Other	Ambient operating temperature		Refer to the derating curve in <i>Engineering Data</i> on page 5 (with no icing or condensation)			
	Storage temperature		-25 to 65°C (with no icing or condensation)			
	Ambient operating humidity		25% to 85% (Storage humidity: 25% to 90%)			
	Dielectric strength		3.0 kVAC for 1 min. (between all inputs and outputs; detection current: 20 mA) 2.0 kVAC for 1 min. (between all inputs and PE terminals; detection current: 20 mA) 1.0 kVAC for 1 min. (between all outputs and PE terminals; detection current: 20 mA)			
	Insulation resistance		100 MΩ min. (between all outputs and all inputs/PE terminals) at 500 VDC			
	Vibration resistance		10 to 55 Hz, 0.375-mm single amplitude for 2h each in X, Y, and Z directions			
	Shock resistance		150m/s <sup>2</sup> , 3 times each in ±X, ±Y, ±Z directions			
	Output indicator		Yes (Color: Green)			
	Conducted Emissions *3		Conforms to EN 55011 Group 1 Class A and based on FCC Class A			
	Radiated Emissions		Conforms to EN 55011 Group 1 Class A			
	Approved standards		UL 508 (Listing), UL 60950-1 cUL: CSA C22.2 No.107.1 cUR: CSA C22.2 No. 60950-1 EN/VDE: EN50178 (= VDE 0160), EN 60950-1 (= VDE 0805 Teil 1) (Terminal block: Based on VDE 0106/P100)			
	SEMI		SEMI F47-0200 (200-VAC input)			
	Weight *8			300 g max.	550 g max.	600 g max.

\*1. When a load is connected that has a built-in DC-DC converter, the overload protection may operate at startup and the Power Supply may not start. Refer to *Overload Protection* on page 6.

\*2. Do not use an Inverter output for the Power Supply. Inverters with an output frequency of 50/60 Hz are available, but the rise in the internal temperature of the Power Supply may result in ignition or burning.

\*3. Rated input voltage: 100 or 200 VAC at 100% load.

\*4. Output characteristics: Specified at power supply output terminals.

\*5. If the output voltage adjuster (V. ADJ) is turned, the voltage will increase by more than +15% of the voltage adjustment range. When adjusting the output voltage, confirm the actual output voltage from the Power Supply and be sure that load is not damaged.

\*6. For details, refer to *Overload Protection* on page 6.


\*7. To reset the protection, turn OFF the input power for seven minutes or longer and then turn it back ON.

\*8. The weight indicated is for Front-mounting, Open-frame Power Supplies.


## Connections

### Block Diagrams


S8JX-G050□□□□ (50 W)

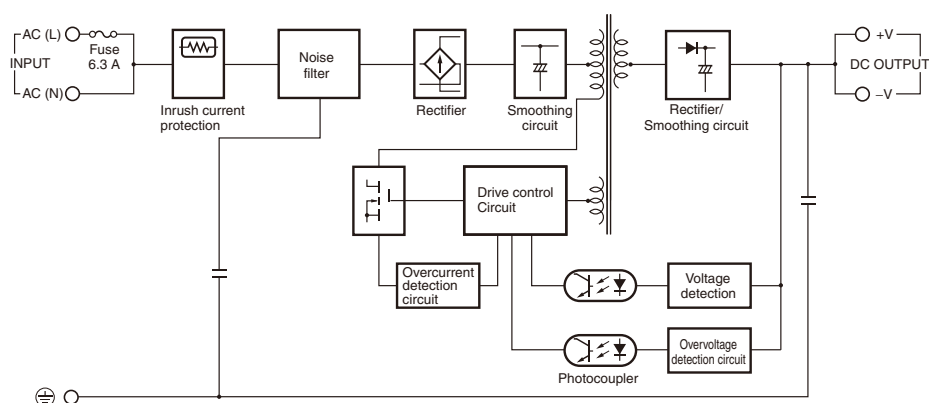

S8JX-G100□□□□ (100 W)

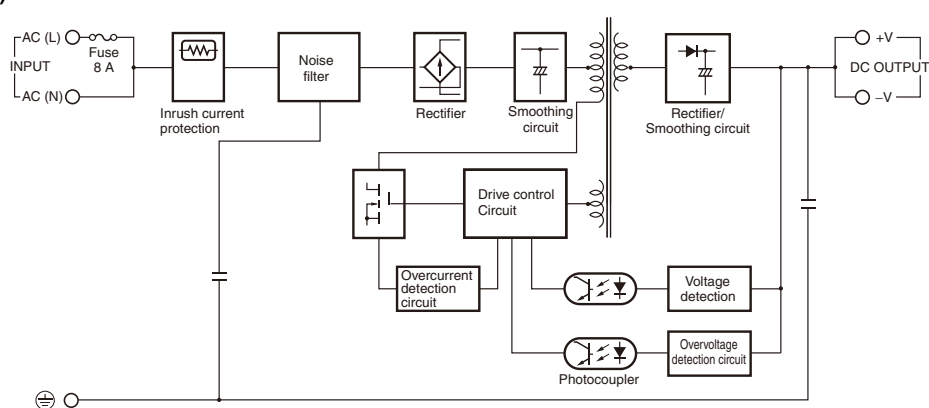


S8JX-G15024□□ (150 W)

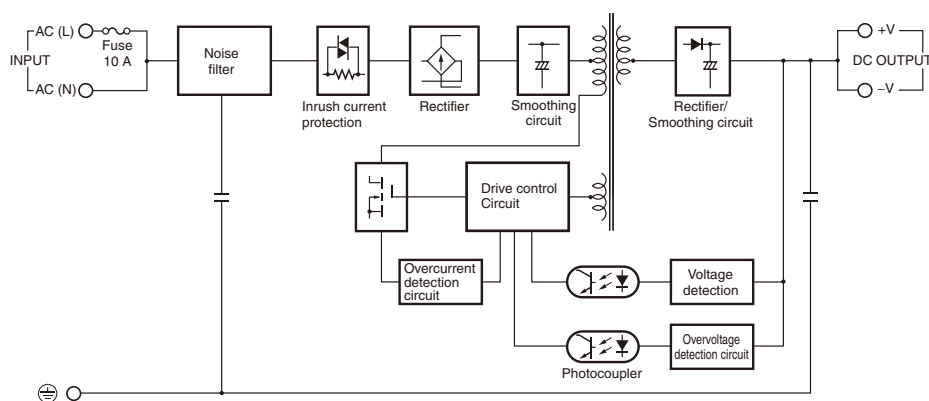

## Construction and Nomenclature

### Nomenclature

#### 50/100/150-W Power Supplies

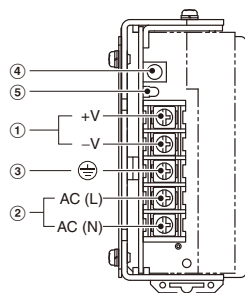

No.	Name	Function
1	DC output terminals (-V), (+V)	Connect the load lines to these terminals.
2	AC input terminals (L), (N)	Connect the input lines to these terminals. *1
3	Protective Earth terminal (PE) (⊕)	Connect the ground line to these terminals. *2
4	Output voltage adjuster (V. ADJ)	Use to adjust the voltage.
5	Output indicator (DC ON: Green)	Lights green while a direct current (DC) output is ON.

\*1. The fuse is located on the (L) side.

\*2. This is the protective earth terminal specified in the safety standards. Always ground this terminal.


Note: The S8JX-G05024CD is shown above.

## Engineering Data


### Derating Curves (Standard Mounting)

#### 50/100/150-W Power Supplies

##### Open-frame Power Supplies

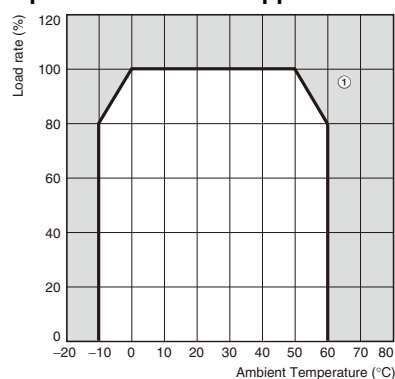

##### Covered Power Supplies

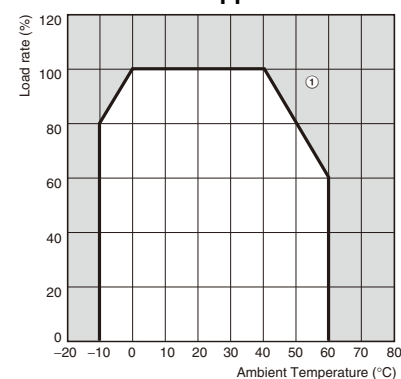


Note: 1. Internal parts may occasionally deteriorate or be damaged. Do not use the Power Supply in areas outside the derating curve (i.e., the area shown by shading ① in the above graph).


2. If there is a derating problem, use forced air-cooling.

### Mounting


Standard Mounting: Front-mounting

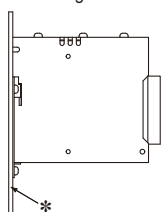


Standard Mounting: DIN Rail-mounting

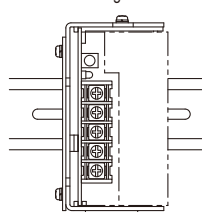

Standard Mounting: Bottom-mounting

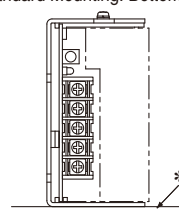

Standard Mounting: Horizontal-mounting

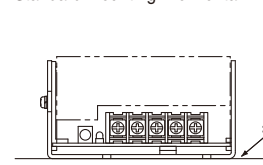

Note: 1. Improper mounting will interfere with heat dissipation and may occasionally result in deterioration or damage of internal parts. Use the standard mounting method only.


2. When mounting the Power Supply, mounting it to a metal plate (\*) is recommended.

3. Install the Power Supply so that the air flow circulates around the Power Supply, as the Power Supply is designed to radiate heat by means of natural air flow.

### Mounting (50/100/150-W Power Supplies)

The following three mounting methods are possible.

- Side-mounting
- Bottom-mounting
- Front-mounting: See information on mounting bracket.

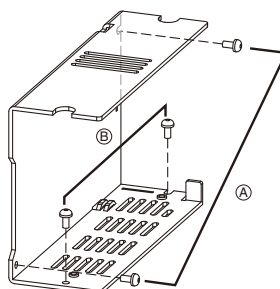


## Overload Protection

The Power Supply is provided with an overload protection function that protects the power supply from possible damage by overcurrent. When the output current rises above 105% min. of the rated current, the protection function is triggered, decreasing the output voltage. When the output current falls within the rated range, the overload protection function is automatically cleared.

### (Reference value)

#### 50 W to 150 W

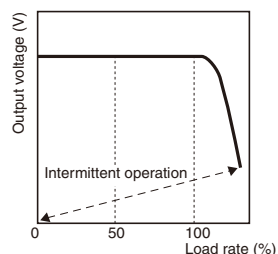


- Note:**
1. When a load is connected that has a built-in DC-DC converter, the overload protection may operate at startup and the power supply may not start.
  2. Internal parts may occasionally deteriorate or be damaged if a short-circuited or overcurrent state continues during operation.
  3. Internal parts may possibly deteriorate or be damaged if the Power Supply is used for applications with frequent inrush current or overloading at the load end. Do not use the Power Supply for such applications.

## Overvoltage Protection


Consider the possibility of an overvoltage and design the system so that the load will not be subjected to an excessive voltage even if the feedback circuit in the power supply fails. When an excessive voltage that is approximately 130% of the rated voltage or more is output, the output voltage is shut OFF, preventing damage to the load due to overvoltage. Reset the input power by turning it OFF for at least seven minutes and then turning it back ON again.

### (Reference value)

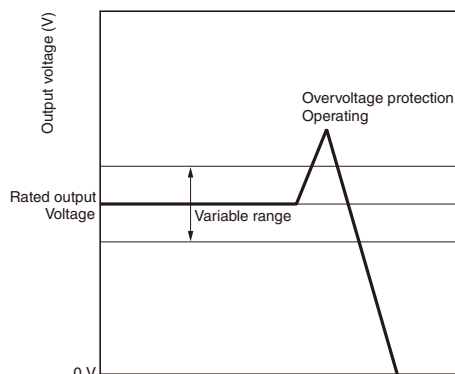

**Note:** Do not turn ON the power again until the cause of the overvoltage has been removed.

## Inrush Current, Startup Time, Output Hold Time


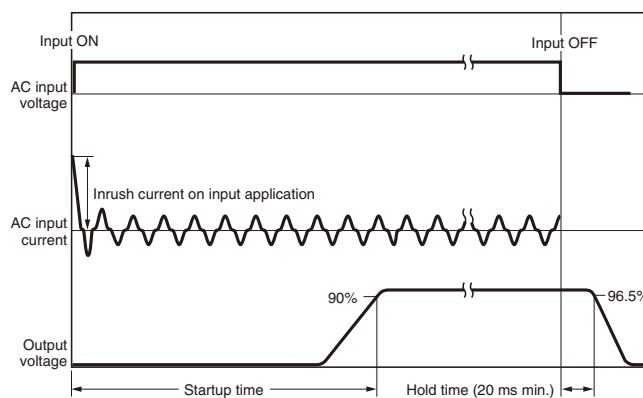


**Note:** A maximum startup time of 500 ms is required. Construct a system configuration that considers the startup time of other devices.

# Dimensions

## Front-mounting Models



S8JX-G050□□ (50 W)  
S8JX-G050□□C (50 W)

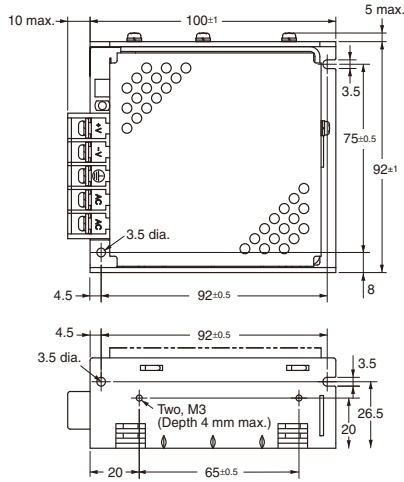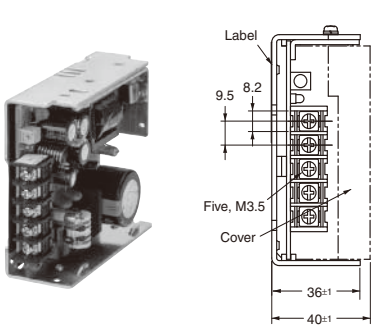

Panel mounting holes dimensions

	Surface screw mounting
Side Mounting	Two, M3 75±0.5 92±0.5
Bottom Mounting	Two, M3 92±0.5

S8JX-G100□□ (100 W)  
S8JX-G100□□C (100 W)  
S8JX-G15024 (150 W)  
S8JX-G15024C (150 W)

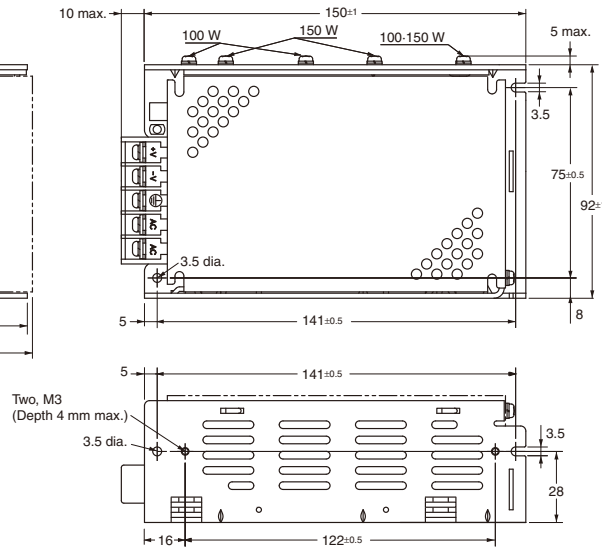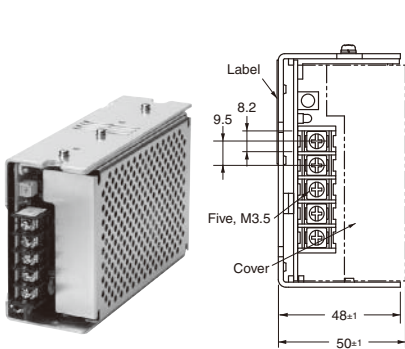


Panel mounting holes dimensions

	Surface screw mounting
Side Mounting	Two, M3 75±0.5 141±0.5
Bottom Mounting	Two, M3 141±0.5

## Mounting Bracket Provided with Front-mounting Power Supplies


50 to 150 W (Provided)

### Front-mounting Bracket

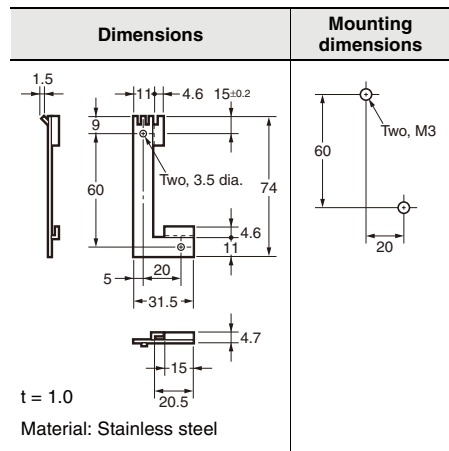

### Front-mounting Method

Temporarily attach the enclosed mounting bracket as shown in the illustration on the right, hook the holes (parts a) in the Power Supply on hooks on the mounting bracket (parts b), and secure the Power Supply with two mounting screws.

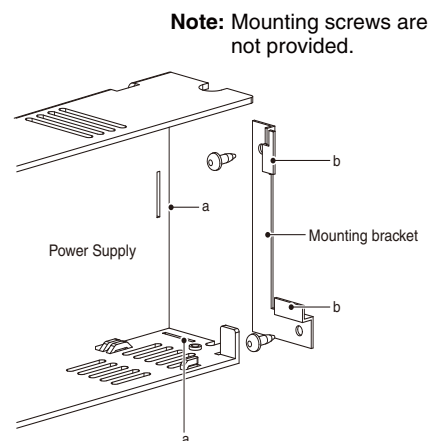

## Mounting Brackets (Order Separately)



Name	Model
Mounting Bracket A (bottom mounting for 50-W models)	S82Y-JX05B
Mounting Bracket B (bottom mounting for 100-W 24-V models)	S82Y-JX10B
Mounting Bracket C (bottom mounting for 100-W 5-V and 12-V models and 150-W models)	S82Y-JX15B
Mounting Bracket D (bottom mounting for 100-W 5-V and 12-V models and 150-W models)	S82Y-JX15F

Note: Mounting brackets (A, B, C, and D) are compatible with the mounting holes of the S82J.

### Mounting Bracket A (Bottom-mounting for 50-W Models)

S82Y-JX05B

#### Using the Mounting Bracket

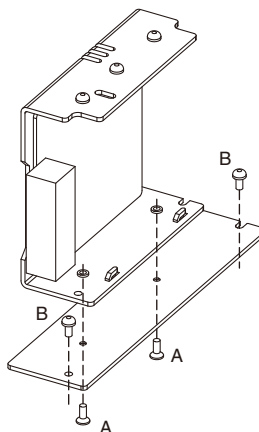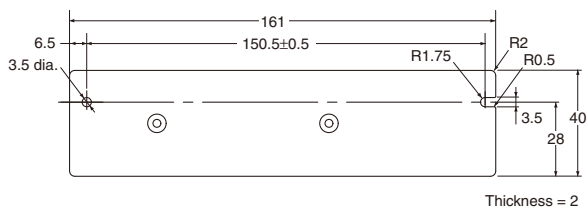

#### Screws Used



- A: Enclosed (two places)  
Be sure to use the enclosed screws.  
Mounting screw tightening torque (recommended): 0.49 N-m
- B: M3 (two places)



**Mounting Bracket B (Bottom-mounting for 100-W 24-V Models)**

S82Y-JX10B

Using the Mounting Bracket

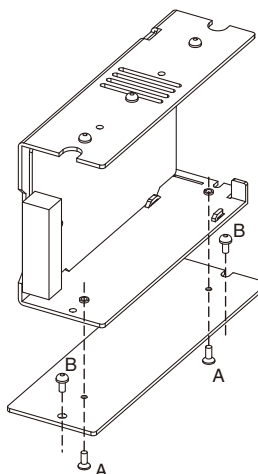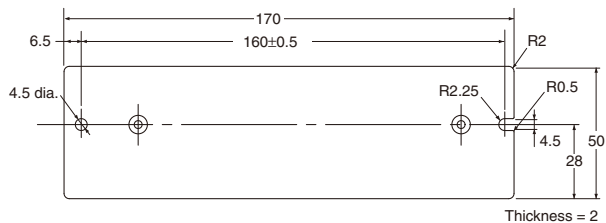



Screws Used

- A: Enclosed (two places)  
Be sure to use the enclosed screws.  
Mounting screw tightening torque  
(recommended): 0.49 N·m
- B: M4 (two places)

**Mounting Bracket C (Bottom-mounting for 100-W 5-V and 12-V Models and 150-W Models)**

S82Y-JX15B

Using the Mounting Bracket

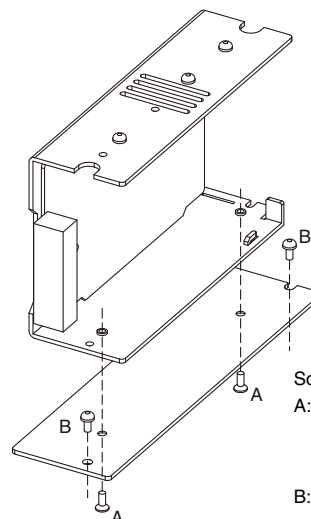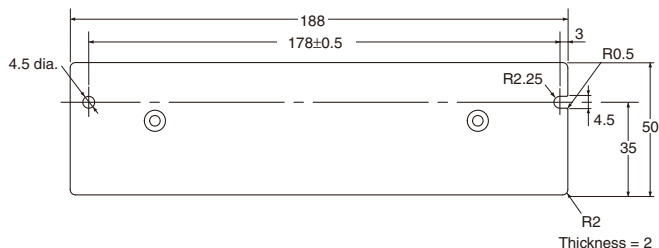



Screws Used

- A: Enclosed (two places)  
Be sure to use the enclosed screws.  
Mounting screw tightening torque  
(recommended): 0.49 N·m
- B: M4 (two places)

**Mounting Bracket D (Front-mounting for 100-W 5-V and 12-V Models and 150-W Models)**

S82Y-JX15F

Using the Mounting Bracket

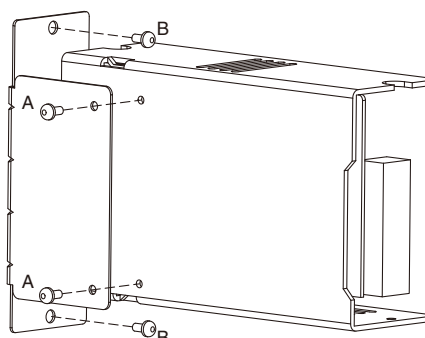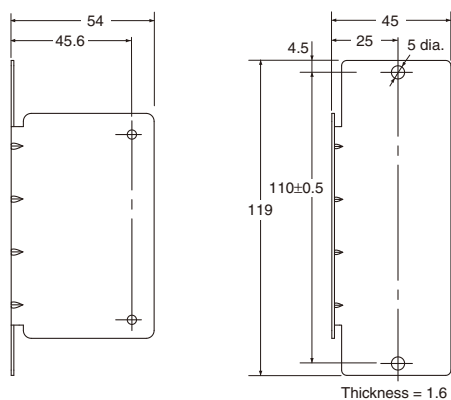


Screws Used


- A: Enclosed (two places)  
Be sure to use the enclosed screws.  
Mounting screw tightening torque  
(recommended): 0.49 N·m
- B: M4 (two places)

### DIN Rail-mounting Models

S8JX-G050□□D (50 W)  
S8JX-G050□□CD (50 W)


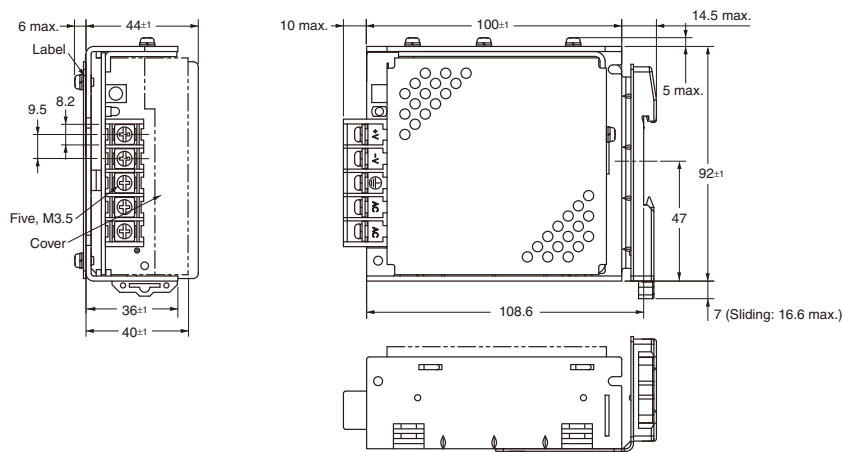


S8JX-G100□□D (100 W)  
S8JX-G100□□CD (100 W)  
S8JX-G15024D (150 W)  
S8JX-G15024CD (150 W)

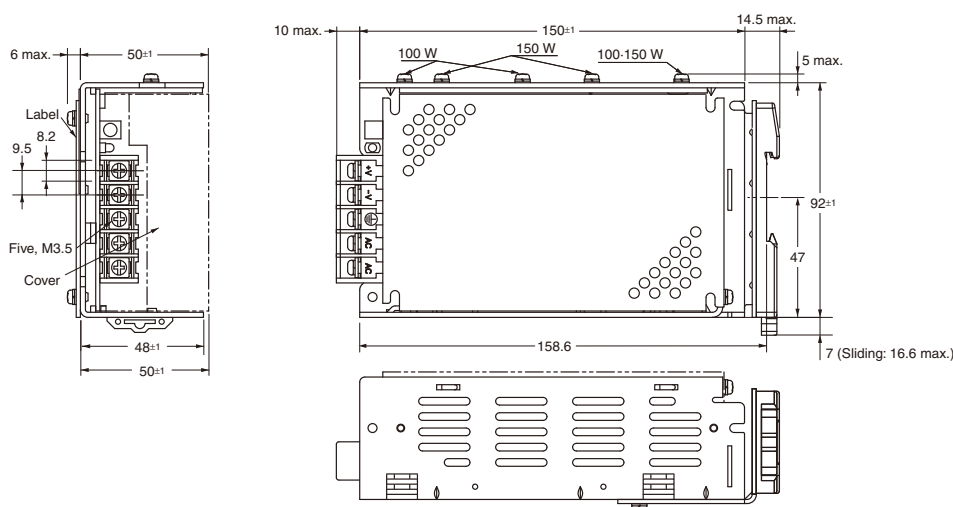



### DIN Rail (Order Separately)

Mounting Rail  
(Material: Aluminum)

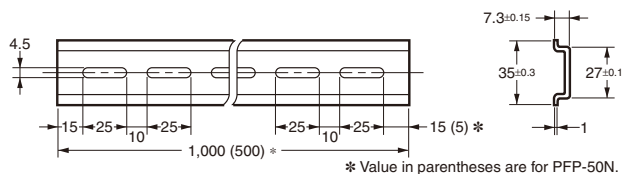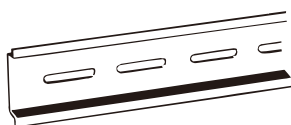


Model
PFP-100N
PFP-50N

Mounting Rail  
(Material: Aluminum)

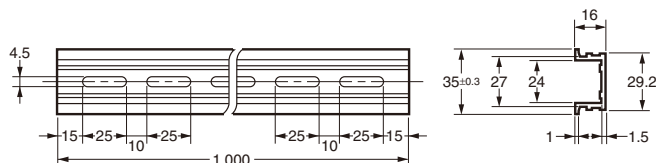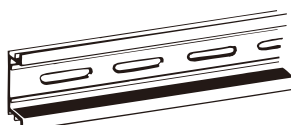

Model
PFP-100N2

End Plate

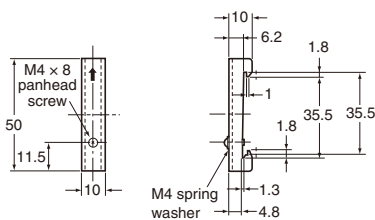

Model
PFP-M

**Note:** 1. If there is a possibility that the Unit will be subject to vibration or shock, use a steel DIN Rail. Otherwise, metallic filings may result from aluminum abrasion.  
2. If the Unit may be subjected to sliding to either side, attach an End Plate (model PFP-M) on each side of the Unit.

## Safety Precautions

### Refer to *Safety Precautions for All Power Supplies*.

#### CAUTION

Minor electric shock, fire, or Product failure may occasionally occur. Do not disassemble, modify, or repair the Product to touch the interior of the Product.



Minor burns may occasionally occur. Do not touch the Product while power is being supplied or immediately after power is turned OFF.



Fire may occasionally occur. Tighten terminal screws to the specified torque of 1.13 N·m.



Minor injury due to electric shock may occasionally occur. Do not touch the terminals while power is being supplied. Always close the terminal cover after wiring.



Minor electric shock, fire, or Product failure may occasionally occur. Do not allow any pieces of metal or conductors or any clippings or cuttings resulting from installation work to enter the Product.




#### Precautions for Safe Use


##### Mounting

- Take adequate measures to ensure proper heat dissipation to increase the long-term reliability of the Product.
- Be sure to allow convection in the atmosphere around devices when mounting. Do not use in locations where the ambient temperature exceeds the range of the derating curve.
- When cutting out holes for mounting, make sure that cuttings do not enter the interior of the Products.
- Improper mounting will interfere with heat dissipation and may occasionally result in deterioration or damage of internal parts. Use the standard mounting method only.
- The internal parts may occasionally deteriorate and be broken due to adverse heat radiation. Do not loosen the screw on the side face of the main body.
- When mounting two or more Power Supplies side-by-side, allow at least 20 mm spacing between them.
- Use the metal plate as the mounting panel.


Standard Mounting  
(Front-mounting and DIN Rail-mounting)

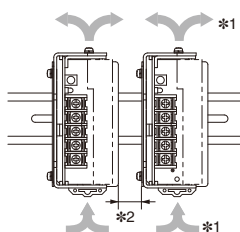

Standard Mounting  
(Bottom-mounting)

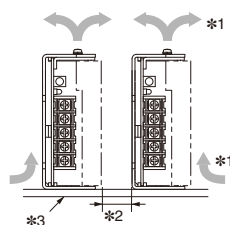

Standard Mounting  
(Horizontal Mounting)

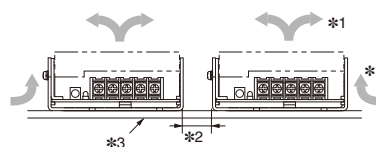

- \*1. Convection of air
- \*2. 20 mm max.
- \*3. Use a metal plate as the mounting surface.

##### Wiring

- Connect the ground completely. A protective earthing terminal stipulated in safety standards is used. Electric shock or malfunction may occur if the ground is not connected completely.
- Minor fire may possibly occur. Ensure that input and output terminals are wired correctly.
- Do not apply more than 75 N force to the terminal block when tightening it.
- Be sure to remove the sheet covering the Product for machining before power-ON so that it does not interfere with heat dissipation.
- Use the following material for the wires to be connected to the S8JX to prevent smoking or ignition caused by abnormal loads.

##### Recommended Wire Type

- Use a wire size of AWG12 to AWG16 (a cross section of 1.309 to 3.309 mm<sup>2</sup>).
- Use wires with a UL-certified temperature of at least 60°C or 60/75°C.
- Use copper conductors only.

##### Installation Environment

- Do not use the Power Supply in locations subject to shocks or vibrations. In particular, install the Power Supply as far away as possible from contactors or other devices that are a vibration source.
- Install the Power Supply well away from any sources of strong, high-frequency noise and surge.

##### Ambient Operating and Storage Environments

- Store the Power Supply at a temperature of -25 to 65°C and a humidity of 25% to 90%.
- The Internal parts may occasionally deteriorate or be damaged. Do not use the Power Supply outside the derating range (i.e., the area shown by shading ① in the derating curve diagram on page 5.)
- Use the Power Supply at a humidity of 25% to 85%.
- Do not use the Power Supply in locations subject to direct sunlight.
- Do not use locations where liquids, foreign matter, or corrosive gases may enter the interior of the Product.

##### Overload Protection

- Internal parts may possibly deteriorate or be damaged if a short-circuited or overload state continues during operation.
- Internal parts may possibly deteriorate or be damaged if the Power Supply is used for applications with frequent inrush current or overloading at the load end. Do not use the Power Supply for such applications.

##### Charging a Battery

When connecting a battery at the load, connect an overcurrent limiting circuit and overvoltage protection circuit.


##### Output Voltage Adjuster (V.ADJ)

- The output voltage adjuster (V.ADJ) may possibly be damaged if it is turned with unnecessary force. Do not turn the adjuster with excessive force.
- After completing output voltage adjustment, be sure that the output capacity or output current does not exceed the rated output capacity or rated output current.

## DIN Rail-mounting

To mount the Power Supply to a DIN Rail, pull down the rail stopper until you hear it clicks open, hook portion (A) of the Power Supply onto the DIN Rail, press the Power Supply in direction (B), and then push up the rail stopper to lock the Power Supply in place.

To dismount the Power Supply, pull down portion (C) with a flat-blade screwdriver and pull out the Power Supply.

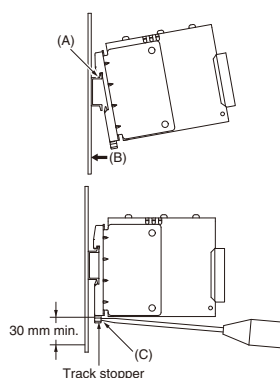

## In Case There Is No Output Voltage

The possible cause for no output voltage may be that the overcurrent or overvoltage protection has operated. The internal protection may operate if a large amount of surge voltage such as a lightning surge occurs while turning ON the Power Supply.


In case there is no output voltage, please check the following points before contacting us:

- Checking overcurrent protected status:  
Check whether the load is in overcurrent status or is short-circuited. Remove wires to load when checking.
- Checking overvoltage or internal protection:  
Turn the power supply OFF once, and leave it OFF for at least 7 minutes. Then turn it ON again to see if this clears the condition.


## Series Operation

Two power supplies can be connected in series. The ( $\pm$ ) voltage output can be accomplished with two Power Supplies.

Series Operation

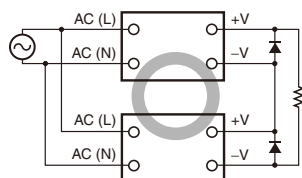

Output Voltage ( $\pm$ )

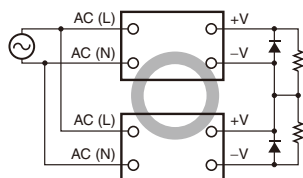

**Note: 1.** If the load is short-circuited, a reverse voltage will be generated inside the Power Supply. If this occurs the Power Supply may possibly deteriorate or be damaged. Always connect a diode as shown in the figure. Select a diode having the following ratings.


Type	Schottky Barrier diode
Dielectric strength ( $V_{RRM}$ )	Twice the rated output voltage or above
Forward current ( $I_F$ )	Twice the rated output current or above

**2.** Although Products having different specifications can be connected in series, the current flowing through the load must not exceed the smaller rated output current.

## Parallel Operation

The Product is not designed for parallel operation.

Parallel Operation

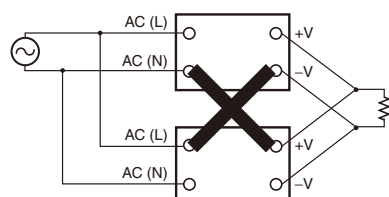

ALL DIMENSIONS SHOWN ARE IN MILLIMETERS.

To convert millimeters into inches, multiply by 0.03937. To convert grams into ounces, multiply by 0.03527.

In the interest of product improvement, specifications are subject to change without notice.

# Safety Precautions for All Power Supplies

This section describes functions and precautions for fully utilizing the capabilities of the Power Supplies.

For precautions for individual products, refer to the *Precautions for Safe Use* for that Product.

## CAUTION

Minor electric shock, fire, or Product failure may occasionally occur. Do not disassemble, modify, or repair the Product or touch the interior of the Product.



Minor injury due to electric shock may occasionally occur. Do not touch the terminals while power is being supplied.



Minor burns may occasionally occur. Do not touch the Product while power is being supplied or immediately after power is turned OFF.



Fire may occasionally occur. Tighten the terminal screws with the specified torque.



Minor electric shock, fire, or Product failure may occasionally occur. Do not allow any pieces of metal or conductors or any clippings or cuttings resulting from installation work to enter the Product.



## ■ Precautions for Safe Use

### Grounding

Connect the ground completely. Electric shock may occur if the ground is not connected completely.

### Operating Environment

Use each Product within the rated range for ambient operating temperature, ambient operating humidity, and storage temperature specified for that Product.

Use the Power Supply within the ranges specified for vibration and shock resistance.

Do not use the Power Supply in locations subject to excessive amount of dust or where liquids, foreign matter, or corrosive gases may enter the interior of the Product.

Install the Power Supply well away from devices that produce strong, high-frequency noise and surge.

Do not use the Power Supply in locations subject to direct sunlight.

### Mounting

The installation screws can be tightened into the Power Supply only to a limited depth. Make sure that the lengths of the screws protruding into the Power Supply are within the specified dimensions. Refer to the dimensional diagrams for each model for specific dimensions.

### Wiring

Use caution when connecting the input cable to the Power Supply. The Power Supply Unit may be destroyed if the input cable is connected to the wrong terminals. Use caution when using a model with a DC input. The Power Supply Unit may be destroyed if the polarity is reversed.

Do not apply more than 75-N force to the terminal block when tightening the terminals.

### Wiring Materials

Use a wire size that suits the rated output current of the Power Supply to be used in order to prevent smoking or ignition caused by abnormal loads.

Caution is particularly required if the output current from one Power Supply is distributed to multiple loads.

If thin wiring is used to branch wiring, the Power Supply's overload protection circuit may fail to operate depending on factors such as the impedance of the load wiring even when the load is short-circuited. Therefore, insertion of a fuse in the line or other protective measures must be considered.

Refer to *Technical Guide for Power Supplies* to select wiring materials.

### Precautions against Ingress of Metal Fragments (Filings)

Drilling on the upper section of an installed Power Supply may cause drilling fragments to fall onto the PCB, thereby short-circuiting and destroying the internal circuits. Whether the Power Supply cover is attached or not, cover the Power Supply with a sheet to prevent ingress of fragments when performing work on the upper section of the Power Supply.

Be sure to remove the sheet covering the Power Supply for machining before power-ON so that it does not interfere with heat dissipation.

### Load

Internal parts may possibly deteriorate or be damaged if a short-circuited or overcurrent state continues during operation.

### Fan-equipped Power Supplies

Power Supplies equipped with a fan have forced air cooling. Do not block the ventilation holes on the fan installation surface and the opposite surface. The cooling effect will decrease if the holes are blocked.

Always secure the finger guard when replacing the fan.

Always turn OFF the input power before replacing the fan. The input power terminals and internal circuits have a high voltage.

Do not touch the internal parts when replacing the fan. Internal parts have a high voltage and high temperature immediately after the input power is turned OFF.

Do not allow the removed screws or tools to enter the Power Supply when replacing the fan.

Use the specified installation direction and torque specified for each product when replacing the fan.

### Disassembly

Do not disassemble the Power Supply except when replacing the fan. The product's original performance may not be maintained.

### Output and Ground Connections

The Power Supply output is a floating output (i.e., the primary side and secondary side are separated), so the output line (i.e., +V or -V) can be connected externally directly to a ground. Through the ground, however, the insulation between the primary side and secondary side will be lost. Confirm that no loops are created in which the Power Supply output is short-circuited through the internal circuits of the load.

Example: When the +V side of the Power Supply is connected directly to a ground and a load is used for which the internal 0-V line uses the same ground.

In the interest of product improvement, specifications are subject to change without notice.

## Read and Understand This Catalog

Please read and understand this catalog before purchasing the products. Please consult your OMRON representative if you have any questions or comments.

## Warranty and Limitations of Liability

### WARRANTY

OMRON's exclusive warranty is that the products are free from defects in materials and workmanship for a period of one year (or other period if specified) from date of sale by OMRON.

OMRON MAKES NO WARRANTY OR REPRESENTATION, EXPRESS OR IMPLIED, REGARDING NON-INFRINGEMENT, MERCHANTABILITY, OR FITNESS FOR PARTICULAR PURPOSE OF THE PRODUCTS. ANY BUYER OR USER ACKNOWLEDGES THAT THE BUYER OR USER ALONE HAS DETERMINED THAT THE PRODUCTS WILL SUITABLY MEET THE REQUIREMENTS OF THEIR INTENDED USE. OMRON DISCLAIMS ALL OTHER WARRANTIES, EXPRESS OR IMPLIED.

### LIMITATIONS OF LIABILITY

OMRON SHALL NOT BE RESPONSIBLE FOR SPECIAL, INDIRECT, OR CONSEQUENTIAL DAMAGES, LOSS OF PROFITS, OR COMMERCIAL LOSS IN ANY WAY CONNECTED WITH THE PRODUCTS, WHETHER SUCH CLAIM IS BASED ON CONTRACT, WARRANTY, NEGLIGENCE, OR STRICT LIABILITY.

In no event shall responsibility of OMRON for any act exceed the individual price of the product on which liability is asserted.

IN NO EVENT SHALL OMRON BE RESPONSIBLE FOR WARRANTY, REPAIR, OR OTHER CLAIMS REGARDING THE PRODUCTS UNLESS OMRON'S ANALYSIS CONFIRMS THAT THE PRODUCTS WERE PROPERLY HANDLED, STORED, INSTALLED, AND MAINTAINED AND NOT SUBJECT TO CONTAMINATION, ABUSE, MISUSE, OR INAPPROPRIATE MODIFICATION OR REPAIR.

## Application Considerations

### SUITABILITY FOR USE

OMRON shall not be responsible for conformity with any standards, codes, or regulations that apply to the combination of products in the customer's application or use of the product.

At the customer's request, OMRON will provide applicable third party certification documents identifying ratings and limitations of use that apply to the products. This information by itself is not sufficient for a complete determination of the suitability of the products in combination with the end product, machine, system, or other application or use.

The following are some examples of applications for which particular attention must be given. This is not intended to be an exhaustive list of all possible uses of the products, nor is it intended to imply that the uses listed may be suitable for the products:

- Outdoor use, uses involving potential chemical contamination or electrical interference, or conditions or uses not described in this catalog.
- Nuclear energy control systems, combustion systems, railroad systems, aviation systems, medical equipment, amusement machines, vehicles, safety equipment, and installations subject to separate industry or government regulations.
- Systems, machines, and equipment that could present a risk to life or property.

Please know and observe all prohibitions of use applicable to the products.

NEVER USE THE PRODUCTS FOR AN APPLICATION INVOLVING SERIOUS RISK TO LIFE OR PROPERTY WITHOUT ENSURING THAT THE SYSTEM AS A WHOLE HAS BEEN DESIGNED TO ADDRESS THE RISKS, AND THAT THE OMRON PRODUCT IS PROPERLY RATED AND INSTALLED FOR THE INTENDED USE WITHIN THE OVERALL EQUIPMENT OR SYSTEM.

## Disclaimers

### CHANGE IN SPECIFICATIONS

Product specifications and accessories may be changed at any time based on improvements and other reasons.

It is our practice to change model numbers when published ratings or features are changed, or when significant construction changes are made. However, some specifications of the product may be changed without any notice. When in doubt, special model numbers may be assigned to fix or establish key specifications for your application on your request. Please consult with your OMRON representative at any time to confirm actual specifications of purchased product.

### DIMENSIONS AND WEIGHTS

Dimensions and weights are nominal and are not to be used for manufacturing purposes, even when tolerances are shown.

### ERRORS AND OMISSIONS

The information in this catalog has been carefully checked and is believed to be accurate; however, no responsibility is assumed for clerical, typographical, or proofreading errors, or omissions.

### PERFORMANCE DATA

Performance data given in this catalog is provided as a guide for the user in determining suitability and does not constitute a warranty. It may represent the result of OMRON's test conditions, and the users must correlate it to actual application requirements. Actual performance is subject to the OMRON Warranty and Limitations of Liability.

### PROGRAMMABLE PRODUCTS

OMRON shall not be responsible for the user's programming of a programmable product, or any consequence thereof.

### COPYRIGHT AND COPY PERMISSION

This catalog shall not be copied for sales or promotions without permission.

This catalog is protected by copyright and is intended solely for use in conjunction with the product. Please notify us before copying or reproducing this catalog in any manner, for any other purpose. If copying or transmitting this catalog to another, please copy or transmit it in its entirety.

2008.10